



**File Name:** bose gs series iii manual.pdf

**Size:** 4957 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 29 May 2019, 21:35 PM

**Rating:** 4.6/5 from 706 votes.

**Status:** AVAILABLE

Last checked: 11 Minutes ago!

**In order to read or download bose gs series iii manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bose gs series iii manual . To get started finding bose gs series iii manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# bose gs series iii manual

You may need them if you ever contact Bose Service. Notify Bose or your authorized Bose away. For contact information, refer to the address sheet included in the carton. The plug marked RIGHT goes into the speaker placed to the right of your TV. Netherlands Svenska 4. Insert the remaining single plug into the connector labeled SPEAKERS on the back of the Acousti mass module. Netherlands Svenska 4. On the other end of the cable, make sure you can see the arrow on top of the plug. Yellow Note There may be other kinds of video connectors on your TV that offer higher resolution than Composite. To use either SVideo or Component connectors, you need the appropriate cables. A red and white audio cable may a or may not b already be attached to these connectors. c. If there are no AUDIO OUT connectors at all, continue with on page 22. Netherlands Svenska To connect another component In addition to your cable or satellite box, you can connect a second component, like a VCR. For this higher quality audio, you need a digital audio cable that works with your component. Such cables are available at most electronics stores. The example here shows an Optical digital connection only. Netherlands Svenska To use video pass through This calls for another composite cable or two SVideo cables, which are available at most electronics stores. Be sure to match red to red and white to white. Note In addition to this connection, you can make a digital AUDIO OUT connection from the TV to the media center. Be sure to match red to red and white to white. You may need to raise the ends and adjust the position to get clear reception. Netherlands Svenska 3. Press firmly to attach the antenna loop to the provided stand. Small tabs on the antenna ring fit into notches on the stand. 4. Voltage variations and spikes can damage electronic components in any system. Note Surge protectors are available at most electronics stores. [http://elk43.com/userfiles\\_1/combosaver-manual.xml](http://elk43.com/userfiles_1/combosaver-manual.xml)

- **cinemate gs series ii manual, bose cinemate gs series ii manual, bose 321 gsx series ii manual, bose cinemate gs series ii specs, bose gs series ii manual, bose 321 gs series iii manual, bose 321 gs series ii manual, bose 321 gsx series iii manual, bose cinemate gs series ii manual pdf, bose 321 gs series ii manual pdf, bose gs series iii manual, bose gs series ii manual, bose gs series ii manual, bose cinemate gs series ii manual, bose 321 gs series ii manual.**

In some cases, the same brand of DVD or VCR device codes can work with a changer. Silences or restores the sound. Enters the System main menu. Displays the DVD menu for the current disc on your TV screen. Displays an onscreen program guide for any connected video devices that provide a guide. Pauses or resumes paused play of recorded music or video. Starts or resumes play of recorded music or video. For CD or MP3 Moves to the previous or next track. Starts DVR or VCR recording of the cable, satellite, or TV program that is playing. Enter Selects the next available radio preset. For video play, also turn on the TV. You may need to change the TV Video Input to see the correct video. Scan backward or forward through the disc, press and hold Seek reverse or Seek ahead. Ratings supplied by the MPAA Parental Control MPAA Setting Rating NC17 Mature teenage audiences PG13 Teenage audiences. If the Optical connection is for a different component 1. Some kinds of setup, however, require a change for optimal performance. In most cases, you make a System change just once. Note To match AM and FM levels, which can vary depending on the program or station, adjusting the volume on your audio component may be preferable. A widescreen DVD image will have black bars on top and bottom. Bose link expansion is a Lifestyle Maintains your established changes in the Settings menu. For example, if you want to change the screen resolution for DVDs, you will find that option in the TV Settings menu. Movie EQ Available only if Audio

Processing is set to Adjustable in the Audio System menu. To begin Move backward or forward to the point in the DVD where you want the segment to start. To cancel the timer, select Off. Alkaline batteries are recommended. 1. Slide open the battery compartment cover on the back of the remote. 2. Remove both batteries. Be sure to dispose of the batteries according to the regulations in your area. <http://presentkompaniet.com/img/content/combrow-cb-625-mk4-manual.xml>

This allows the unit to reset itself after a power surge or power interruption. You may be in an area of weak signal coverage for some stations. For customer service For additional help in solving problems, contact Bose Customer Service. Refer to the address sheet included in the carton. Netherlands. HDCP is a form of Digital Rights Management licensed by Digital Content Protection, LLC, to control digital audio and video content as it travels across Digital Visual Interface DVI or High Definition Multimedia Interface HDMI connections. A32 Video accessory RACC. A32 Audio receiver. It will help you set up and operate your system properly and enjoy all of its advanced features. Save this owner's guide for future reference. **WARNING** To reduce the risk of fire or electric shock, do not expose the system to rain or moisture. **WARNING** Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this owner's guide. **CAUTION** To prevent electric shock, match wide blade of plug to wide slot, insert fully. **CAUTION** Do not place any naked flames, such as lighted candles, on or near the apparatus. **CAUTION** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. The DVD player should not be adjusted or repaired by anyone except properly qualified service personnel. Class B emissions limits This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations. Batteries Please dispose of used batteries properly, following any local regulations. Acoustimass module serial number Media Center serial number Save all packing materials, which provide the safest way to transport your system.

Make sure your system includes the parts shown. **WARNING** To avoid danger of suffocation, keep the plastic bags out of the reach of children. As you identify them, you may want to place a check mark in the box next to the name of each part. If any part of the system appears damaged, do not try to use it. Remote control and batteries. Rubber feet for speakers. Setup disc Speaker cable Acoustimass module cable. Acoustimass module power cord. Stereo audio cable. HDMI video cable Composite video cable. AM antenna and stand. FM antenna **CAUTION** Do not plug the Acoustimass module into an AC power mains outlet until all other components are connected. 6. Continue with on the next page. Fastener screws 3 This may be located on the side or rear connector panel of the TV. 3. Follow the directions that are appropriate for your TV or TV with HDMI TV without HDMI on page 14 on page 15 Match the wide side of the plug to the wide side of the connector. 2. Insert the other end of this cable into the HDMI connector on the media center. TV with HDMI Bose logo 5 Note If you make this HDMI connection, you do not need the supplied yellow Composite video cable to make any connections. **DO NOT** use either of the two **ONLY PASSTHROUGH** connectors on the back of the media center for video from a component. Neither SVideo nor Composite signals can pass through the HDMI cable to the TV. Note There may be other kinds of video connectors on your TV that offer higher resolution than Composite. To use either SVideo or Component connectors, you need the appropriate cables. These cables are available at most electronics stores. 2. Plug the Composite video cable into the yellow VIDEO IN connector on your TV. Note If there is just one Composite Video In connector on your TV, it may be in use already for another video component. You can disconnect that component from the TV, and see "To use video pass through" on page 21.

TV without HDMI Yellow Yellow Leave the video from your component connected to your TV. 5.

Select the audio cable that has red and white plugs at each end. 5 Connecting a cable box or other component What you need to use Stereo audio cable Media center Your cable box, satellite box, or other component White plug Red plug A red and white audio cable may already be attached to these connectors. c. If there are no AUDIO OUT connectors at all, continue with on page 22. 3. To use the AUDIO OUT connectors, follow a or b as appropriate. a. If an audio cable is already attached Disconnect the cable from the TV only. b. If an audio cable is not yet attached Connect the cable to your cable or satellite box. Be sure to connect red to red and white to white. OR a. b. 6 For this you need another audio cable with red and white plugs, available at most electronics stores. 1. Use this additional cable to connect to the AUDIO OUT on your component. White plug Red plug White plug Red plug For this higher quality audio, you need a digital audio cable that works with your component. Such cables are available at most electronics stores. 1. Identify the digital connector on your component as either an Optical or Coaxial connector. 2. Be sure to use the right cable for this connector. Note If your component has an Optical and a Coaxial connector, use either one but not both. 3. Connect one end of your digital cable to the digital AUDIO OUT connector on your component. Be sure to keep the red and white audio cable connected. This allows you to hear the audio if the program audio is not digital or the digital signal is interrupted. 4. Locate the appropriate digital AUDIO IN connector, labeled D, on the system media center. If your Optical component is neither of those, you need to select your component in an onscreen System menu. See "Getting digital audio from a source" on page 45.

Coaxial Optical Optical OR Coaxial The example here shows an Optical digital connection only. To use video pass through This calls for another composite cable or two SVideo cables, which are available at most electronics stores. Be sure to use one matched pair as shown here DO NOT use either of the two ONLY P ASSTHROUGH connectors on the left if you have made an HDMI or Component connection VIDEO OUT TO TV. Continue with on the next page. Video in from your component Video out to your TV 6 Note If you have already connected the audio cable provided with the system, you need another cable for this connection. These cables are available at most electronics stores. 6 Connecting audio from your TV as an option What you need to use Audio cable Media center Your TV 7 Be sure to match red to red and white to white. Note In addition to this connection, you can make a digital AUDIO OUT connection from the TV to the media center. For more information, review "To get digital audio from the component" on page 20. Continue to use your TV speakers for TV program audio. White plug Red plug Be sure to match red to red and white to white. 3. Use your TV remote control to turn the TV speakers down to minimum volume. White plug Red plug You may need to raise the ends and adjust the position to get clear reception. For AM 1. Select the AM antenna and stand. On 220240V models only, turn the POWER switch to on. On dualvoltage systems only, set the voltage switch for the power that is appropriate to the region where you use the system. 3. Plug the other cable end into the AC mains power. CAUTION Bose recommends using a safety agency approved surge protector on all electronic equipment. Voltage variations and spikes can damage electronic components in any system. The light turns off briefly as you press each key. 7. Make sure the light turns off completely after all digits are entered. If the light blinks now, the code is invalid.

If it performs both operations, this code is correct. Write the code numbers below If this code does not work, repeat steps 58 using a different code for your TV. In some cases, the same brand of DVD or VCR device codes can work with a changer. The light turns off briefly as you press each key. 4. Make sure the light turns off completely after all digits are entered. If the light blinks instead of turning off, the code is invalid. Write the code numbers below If this code does not work, repeat steps 25 using a different code for your component. AUX AUX or AUX AUX Note If you do not see the DVD video on your TV screen, change the Video Input on the TV. Or use the button for Video Input on your TV remote control. For more information, refer to the owner's manual that came with your TV. If you STILL do not see the DVD image on your screen, see the problem

identified as “Sound, but no picture” under Troubleshooting on page 62. Switches between FM and AM when the radio is playing. Selects the audio from the device connected to AUX on the media center rear panel. Enters the System main menu. Displays the DVD menu for the current disc on your TV screen. Displays an onscreen program guide for any connected video devices that provide a guide. Exits the onscreen menus or information screens of other connected video sources. Moves ahead or back by one page in an electronic program guide, if one is available. Confirms the selection of a menu item. Moves up, down, left, or right in a menu or screen. Selects the next or previous item in a menu list. Pauses or resumes paused play of recorded music or video. Starts or resumes play of recorded music or video. For DVR Moves backwards a few seconds with each press. For DVR Moves forward a few seconds with each press. For CD Selects a track. For DVD Selects a chapter. For TV, cable, or satellite Selects the channel of the numbers pressed.

For MP3 Holding down the button displays or dismisses artist and title information on the media center display panel. For TV, cable, or satellite Returns to the channel last selected. Starts DVR or VCR recording of the cable, satellite, or TV program that is playing. Enter Selects the next available radio preset. Eject Opens or closes the disc tray. You may need to change the TV Video Input to see the correct video. Note To prevent mid play video disc problems, be sure the disc is clean. This is particularly important with rented DVDs. 2. On the media center control panel, press Eject to open the disc tray. 3. Place the disc right side up in the tray. 4. Press Eject again to close the tray. The disc begins to play automatically. The media center display registers disc information and progress as the play continues. Note If the display text is not in your language, see “Language choices” on page 48. Or see your TV owner’s guide for instructions. Skip to the next CD track or DVD chapter, press Chapter up. Skip to the previous CD track or DVD chapter, press Chapter down. Press Play to end the scan. Stop a disc and open the disc tray, press Eject on the media center. Keeping your discs clean Scratches or dirt on a disc can prevent it from playing properly. Wipe straight out from the center to the edge.. Do not use a circular motion For DVDs Setting Parental Control You can password protect some DVDs that are not appropriate for other family members. Region codes For any DVD player and DVD disc to work together, the code for the region where they were sold must match. A code symbol is marked clearly on the bottom of your system media center and on the DVD cover where it may be very small. For example, Region 1 is. Please respect the rights of the artists and other copyright holders. Ratings supplied by the MPAA The numbers above the one you select will be restricted. 2.

In the System menu, select DVD Lock and enter your password. 3. Use the arrow buttons to reach Lock UnRated Discs and select Yes. 4. Move down to Lock Discs Rated Above and right to the numbers. 5. Press the up or down arrow button to select a number. Any numbers above this selection will be restricted by password protection. 6. Press ENTER to save this setting and Exit to move out of the System menu. Parental Control Setting MPAA Rating Audience Restriction 8 None 7 NC17 Adult audiences 6 R Mature audiences 5 Mature teenage audiences 4 PG13 Teenage audiences 3 PG Mature young audiences 2 Most audiences 1 G General For example, you see a person’s lips move after you hear the words. The Settings menu appears on screen. 2. Move down to the audio delay icon and press ENTER. 3. Select an adjustment 18 and wait to see if this corrects the problem. Each selection makes a minute timing adjustment. It may be difficult to notice the change. AUX AUX This prevents an echo effect from two sets of speakers playing. Note Your TV may provide an onscreen menu to make changes to the video image. For a full list and description of these options, see “Adjustments to the performance” on page 47. Removing a station from a preset 1. Press the number of the preset. 2. Listen to be sure this is the preset you want to erase. 3. Press and hold zero. Some kinds of setup, however, require a change for optimal performance. In most cases, you make a System change just once. For details on the other options available, refer to the tables on the pages that follow. The System menu appears on your TV screen. 4. To get into the menu, move right and select an icon like Media Center, shown on page 48 for one of the

system features. The list of options appears on the menu screen. Note Entering the System menu pauses a DVD or CD. As explanation for each options appears at the bottom of the menu when you highlight the option by moving up or down.

4. Press ENTER to select the option. 5. Change the option by selecting a new setting or by pressing number buttons, as needed. 6. Press Exit to leave the System menu. Language choices You can select the language you prefer to see on screen and on the media center display. To make this change, move to the Display Language option in the Media Center feature of the System menu. Allows some processing options Movie EQ, Range Compression, Mono Decoding to appear in Settings menus. Note To match AM and FM levels, which can vary depending on the program or station, adjusting the volume on your audio component may be preferable. Option Default Setting Options Description Widescreen TV Note If your TV is connected using an HDMI cable, you may not see a choice of settings. Yes 169 No 43 Yes tells the system that widescreen 169 is the TV format. No tells the system that 43 is the TV format. For a TV connected using a Composite, SVideo, or Component cable, selecting No also makes available the DVD Image option below. Note If you are not sure what type of cable is used to connect your TV, check the Video Connector indicator, which is explained on page 51. DVD Image Note This option is NOT available UNLESS you have selected No in the Widescreen TV option above for your TV connected using a Composite, SVideo, or Component cable not HDMI. You can change this video resolution in the Settings menu. No change can be made to this video resolution in the Settings menu. Some TVs determine automatically how to fill the screen, overriding any choice. For a TV connected using nonHDMI cable Modified allows the Bose system to adjust the images on some widescreen DVDs to fill a 43 TV screen. This is done by removing the black bars on top and bottom and by cropping the sides of the image. Many DVD images, even widescreen, will still appear with black bars on top and bottom. Original tells the Bose system to keep the image in the original format of the DVD.

A widescreen DVD image will have black bars on top and bottom. Video Black Level Appears on screen only if the TV connects to the media center using a Composite or SVideo cable. Normal Extended Screen black level generally appropriate for most TVs. Darkens the intensity of the black on screen. TV Video Format NTSC US PAL EUROPE MULTISTANDARD Correct for NTSC U.S. standard monitors. Correct for PAL European standard monitors. Only for a TV that supports multiple formats NTSC and PAL. Progressive Scan Appears on screen only if the TV connects to the media center using a Component cable. It is not needed with HDMI. Off On Note If selecting On distorts your screen, press the remote up arrow to reselect Off. Screen image repaints in standard style. Screen image repaints in advanced style if your TV provides this option. Note With an HDMI connection, you will not see the On option. The HDMI cable automatically senses your TV capabilities and applies progressive scan as appropriate. Option Default Setting Options Description Display Brightness 4 1 to 4 Media center display shows text at its brightest. Choosing a lower number darkens text on the display. Display Language English Dansk, Deutsch, Espanol, Francais, Italiano, Nederlands, Svenska Onscreen display menus appear in the selected language. Identifies a different component connected by Optical cable to the media center. Tuner Spacing US European Applies the regional standard for incremental spacing between AM and FM stations. Returns all of your selections in the Settings menu to the original factory settings. To see the settings, enter the Settings menu for the selected source. Symbols and definitions for the options that are offered appear on screen. Note Some of the settings made while you are playing a particular source are temporary.

When you change sources or turn off the system, these settings revert to the factory selections. The Settings menu that affects this source appears on your media center display. It also appears on screen if your TV is on and you select the proper TV Video Input. 3. Move up or down to the option you want and press ENTER. 4. Move right to select a new setting for that option and press ENTER.

5. Press Exit to leave the Settings menu. The Settings menu appears as a vertical bar of icons. To familiarize yourself with the icons, see "Settings options" on pages 54-59. The most noticeable mismatch in the video and audio synchronization caused by the video processing in some TVs, occurs in scenes with people talking. If they appear to finish sentences before their lips stop moving, select a different Audio Delay setting to correct this condition. Adjusts the equalization of the movie soundtrack to better suit some home theater installations. Note To turn on Movie EQ, the Audio Processing option in the System menu must be set as User Adjustable. Reduces the volume range of sounds on a movie soundtrack. Late at night or at other quiet times, the startling difference between the quietest and loudest audio passages in a movie can be a problem. Turning this feature On moderates those effects. Note To turn on Range Compression, the Audio Processing option in the System menu must be set as User Adjustable. Changing this setting allows you to hear the audio on mono channel 2, or both mono channels at the same time. You can experiment with other settings to see which one provides the best picture. HDTVs can accept different resolutions as input, and in some cases the highest number does not result in the best picture. Important note When you change resolution, your TV screen takes several seconds to make the transition. Allow for this adjustment before pressing other buttons.

Features Default Setting Options Effect Some DVDs do not allow direct access to chapters. Audio Track For DVD only. Dependent on disc Gives you a choice of audio tracks on the current disc. Subtitle Language For DVD only. Dependent on disc Gives you a choice of subtitle languages if several are included on the disc. Features Default Setting Options Effect To begin 1. Move backward or forward to the point in the DVD where you want the segment to start. 2. Press ENTER. 3. Move to the point where you want it to end. 4. Press ENTER. Repeats until you select this setting option again and press ENTER. Features Default Setting Options Effect Otherwise, it plays mono. When you change the tuner frequency, the setting resets to Auto. RDS Info For FM and only on some systems. On Off Displays any station and program information that is available from the Radio Data System. Features Default Setting Options Effect Alkaline batteries are recommended. 1. Slide open the battery compartment cover on the back of the remote. 2. Remove both batteries. Be sure to dispose of the batteries according to the regulations in your area. 3. Insert two AA IECR6 1.5V batteries, or the equivalent. Cleaning the media center Use only a soft, dry cloth to clean the outside surfaces of the media center. Cleaning the speakers Use a soft, damp cloth. Or use an ammonia-free window cleaner on a soft cloth to maintain the finish. Battery compartment cover AA batteries 2 CAUTION Do not change the voltage switch from 230V to 115V unless you are certain it is appropriate for the power supply in your location. For details, refer to "Choosing new settings" on page 53. You may be in an area of weak signal coverage for some stations. Refer to "Audio options" on page 49. Refer to "Device codes" located at the back of the book. Refer to "Replacing remote batteries" on page 59. System issues What to do Refer to "Video options" on page 50.

You can experiment with other settings to see which one provides the best picture. HDTVs can accept different resolutions as input, and in some cases the highest number does not result in the best picture. Limited warranty This system is covered by a transferable limited warranty. Details of the limited warranty are provided on the Product Registration Card that came with your system. Also make sure the region codes match. Refer to "Checking for disc compatibility" on page 42. This allows the unit to reset itself. 3. Before powering on, press and hold Eject on the media center. The standard TV aspect ratios are 4:3 and 16:9 called widescreen. This provides high-quality playback. Component video requires the use of a Component cable. This provides considerably better resolution than is possible from either Composite or S-Video signals. Its low-resolution signal is compatible with the broadest range of televisions and other video components and requires a simple RCA video cable. A 16:9 screen 4:3 screen Data can be added to a DVDR once only, and to a DVDRW more than once. With a hard drive, an electronic program guide, and internal processing, a DVR simplifies recording and playback of programs. D G LOSSARY HDTV offers a much better picture

quality than standard television. A common form of digital audio signal. Not compatible with all video displays. This feature is available on European systems only. This type of connection requires use of an S-Video cable. There can be several titles on a DVD, one of which may be a movie. Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. All rights reserved. This product contains one or more programs protected under international and U.S. copyright laws as unpublished works. They are confidential and proprietary to Dolby Laboratories. MPEG Layer 3 audio compression technology licensed by Fraunhofer IIS and THOMSON multimedia.

All Rights Reserved. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited. Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of 525 or 625 progressive scan picture problems, it is recommended that the user switch the connection to the "standard definition" output. If there are questions regarding your TV set compatibility with this model 525p and 625p DVD player, please contact our customer service center. Use of this copyright protected technology is limited solely to use with the Cirrus Logic integrated circuits incorporated in this product. Reverse engineering or disassembly is prohibited. HDMI, the HDMI logo and High Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC. This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations. For contact information, refer to the address sheet included in the carton. English: What you need to use. Media center OR Speakers. Left speaker. Nederlands: Speaker cable. OR Speakers. Svenska: SETUP. The plug marked RIGHT goes into the speaker placed to the right of your TV. Nederlands: English: Arrow. What you need to use. Media center. Svenska: SETUP. Nederlands: English: What you may need to use. HDMI video cable. Svenska: SETUP. This may be located on the side or rear connector panel of the TV. TV with HDMI or TV without HDMI. Bose logo.